

Accessory for Taurus Series Riveting Tools :

Nose Extension Units



1. Purpose

The nose extension units are used to reach recessed riveting locations. Two different lengths are available for all Taurus tools : A 50 mm (2") extension and a 100 mm (4") extension.

Taurus 1	Nose Extension Unit 50 mm	P/N : 756 2013
Taurus 1	Nose Extension Unit 100 mm	P/N : 756 2015
Taurus 2	Nose Extension Unit 50 mm	P/N : 757 1016
Taurus 2	Nose Extension Unit 100 mm	P/N : 757 1019
Taurus 3	Nose Extension Unit 50 mm	P/N : 758 1021
Taurus 3	Nose Extension Unit 100 mm	P/N.: 758 1023

2. Design

Each Nose Extension Unit consists of 3 parts:

- 50 mm or 100 mm extended head
- 50 or 100 mm extended jaw pusher
- 50 or 100 mm complete transition piece

After installation the total available head length is 106 mm (4,17") with the 50 mm extension and 156 mm (6,17") with the 100 mm extension, without any diameter increase.

3. Installation

The Nose Extension Units can be installed without any special tool, only with the wrench included in the package.

4. Spare parts

All spare parts for the Nose Extension Units can be ordered as follows :



	50 mm Head	100 mm Head	50 mm Jaw pusher	100 mm Jaw pusher	Transition piece 50 mm	Transition piece 100 mm
T1 50mm	7561017		7561018		7562014	
T1 100mm		7561020		7561021		7562016
T2 50 mm	7561017		7571014		7562014	
T2 100mm		7561020		7571015		7562016
T3 50mm	7561017		7581019		7562014	
T3 100mm		7561020		7581020		7562016