

Accessory for Taurus Series Riveting Tools :

Swivel connector P/N 756 1023 for air supply line



1. Purpose and Installation

The swivel air connector is used to increase the freedom of movement of the tool around its air supply line connection. Two different installations are possible. (See also the operating instructions).

- On the rear air inlet:

- Unscrew the hose with its fitting and sealing ring (Parts 64 und 89)
- Screw the swivel connector with sealing ring into place
- Screw the hose fitting with its sealing ring into the rear plug of the swivel connector .

- On the side air inlet:

- Unscrew the hose with its fitting and sealing ring .
- Unscrew the safety valve with its sealing ring (Parts 89;90)
- Proceed as above to install the swivel connector and the air supply hose
- Screw the safety valve with ist sealing ring into the rear air inlet.

2. Scope of delivery

The complete swivel connector includes the swivel connector itself, as well as its sealing ring.